



1885619 O-Sullivan King 4 Poster Bed
1885622 O-Sullivan Queen 4 Poster Bed
Parts and Hardware List


A.	Left Headboard Post	1 pc
B.	Right Headboard Post	1 pc
C.	Left Footboard Post	1 pc
D.	Right Footboard Post	1 pc
E.	Headboard Panel	1 pc
F.	Footboard Rail	1 pc
G.	Spindles	4 pcs
H.	Finials	4 pcs
I.	Side Rails	2 pcs
J.	Support Slats	4 pcs
K.	Center Support Slat	1 pc
L.	Leg Supports	3 pcs
M.	Short Allen Head Bolts	10 pcs
N.	Long Allen Head Bolts	4pcs
O.	Lock Washers	14 pcs
P.	Small Flat Washers	6 pcs
Q.	Large Flat Washers	8 pcs
R.	Allen Head Wrench	1 pc
S.	Phillips Head Screws	20 pcs
T.	Phillips Head Screwdriver	1 pc
U.	Plastic Caps	6 pcs
V.	Optional Allen Head Screwdriver Bit	1 pc

- * Please make sure you have all the parts and hardware indicated above before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * Take care not to over tighten bolts if using supplied Allen Head Screwdriver Bit.


Notes: Maximum Loadability 800 LBS




1885619 O-Sullivan King 4 Poster Bed
1885622 O-Sullivan Queen 4 Poster Bed
Hardware Illustrations

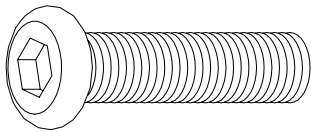


M. Short Allen Head Bolt

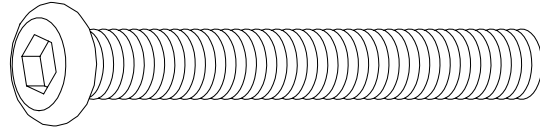


N. Long Allen Head Bolt




O. Lock Washer




P. Small Flat Washer



Q. Large Flat Washer



S. Phillips Head Screw

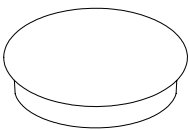

U. Plastic Cap



1885619 O-Sullivan King 4 Poster Bed

1885622 O-Sullivan Queen 4 Poster Bed

Assemble Headboard & Footboard

Parts required

A.	Left Headboard Post	1 pc	M.	Short Allen Head Bolts	6 pcs
B.	Right Headboard Post	1 pc	O.	Lock Washers	10 pcs
C.	Left Footboard Post	1 pc	P.	Small Flat Washers	6 pcs
D.	Right Footboard Post	1 pc	Q.	Large Flat Washers	4 pcs
E.	Headboard Panel	1 pc	R.	Allen Head Wrench	1 pc
F.	Footboard Rail	1 pc	U.	Plastic Caps	6 pcs
N.	Long Allen Head Bolts	4 pcs	V.	Optional Allen Head Screwdriver Bit	1 pc

1. **Assemble Headboard** Insert the Headboard Panel (E) into the pre-bored slots of the Left & Right Headboard Posts (A, B). Align the pre-threaded holes on the panel with pre-drilled holes on Left & Right Headboard Posts (A, B). (Make sure the finished side of the Headboard panel (E) is facing the same direction as pre-cut slots for the Side Rails on the bottom of the Headboard Posts). Secure with the Short Allen Head Bolts (M), Lock Washers (O) and Small Flat Washers (P) using Allen Head Tool (R or V). Cover the pre-drilled holes on the Left & Right Headboard Posts (A, B) with Plastic Caps (U). See illustration #1.
2. **Assemble Footboard** Align the pre-drilled holes in the ends of Footboard Rail (F) with the pre-threaded holes in the the Left & Right Footboard Posts (C, D). Secure with the Long Allen Head Bolts (N), Lock Washers (O) and Large Flat Washers (Q) using Allen Head Tool (R or V). See illustration #1.

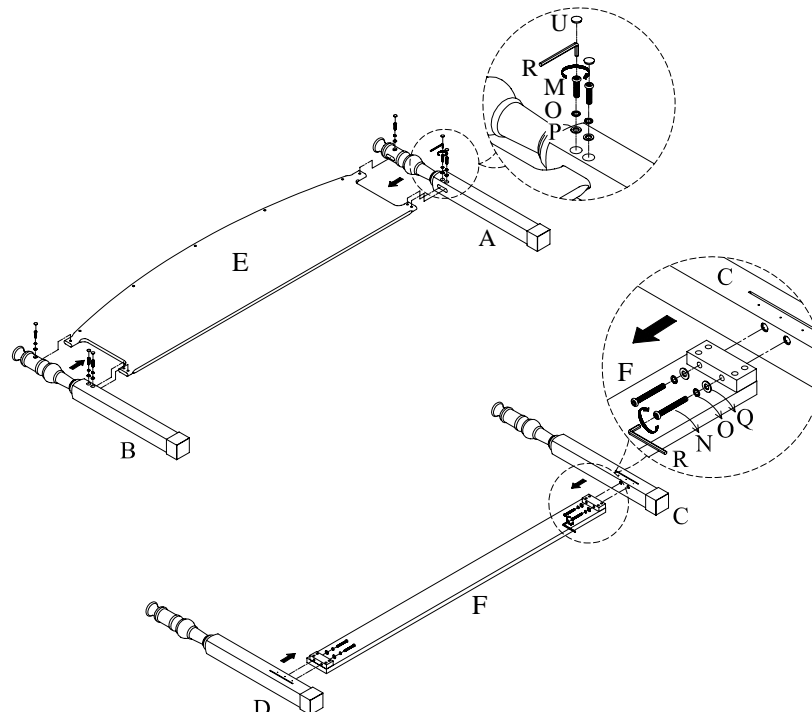


Illustration #1



1885619 O-Sullivan King 4 Poster Bed

1885622 O-Sullivan Queen 4 Poster Bed

Assemble Bed

Parts required

G.	Spindles	4 pcs	R.	Allen Head Wrench	1 pc
H.	Finials	4 pcs	O.	Lock Washers	4 pcs
I.	Side Rails	2 pcs	Q.	Large Flat Washers	4 pcs
J.	Support Slats	4 pcs	S.	Phillips Head Screws	20 pcs
K.	Center Support Slat	1 pc	T.	Phillips Head Screwdriver	1 pc
L.	Leg Supports	3 pcs	V.	Optional Allen Head Screwdriver Bit	1 pc
M.	Short Allen Head Bolts	4 pcs			

3. **Attach the Side Rails (I)** Insert the exposed hooks of the Side Rail (I) into the pre-bored slots of the Left Headboard Post (A) and Left Footboard Post (C), press the Side Rail (I) down onto the pins. (Make sure that the hooks are all the way down onto the pins.) See illustration #2.
4. Repeat step 3 for the other side as shown in illustration #2.
5. **Attach the Leg Supports (L)** Insert exposed threads in Leg Supports (L) into the pre-threaded holes in Center Support Slat (K). Secure by turning in a clockwise direction. See illustration #2.
6. **Attach the Center Support Slat (K)** Align the pre-drilled holes in the Support Slats (J) with the pre-threaded holes in Center Support Slat (K), using Short Allen Head Bolts (M), Lock Washers (O), Large Flat Washers (Q) and Allen Head Tool (R or V) and secure by turning in a clock wise direction. See illustration #2.
7. **Attach the Support Slats (J)** Place the Support Slats (J) into the pre-cut slots on the cleats of Side Rails (I). Secure both sides of each Support Slat (J), with Phillips Head Screws (S) using Phillips Head Screwdriver (T).
8. Secure the plates at each end of Side Rails (I) to the Footboard Posts (C, D) and Headboard Posts (A, B) using Phillips Head Screws (S) with Phillips Head Screwdriver (T). See illustration #2.
9. Insert the exposed threads of the Spindles (G) into the pre-threaded holes in Headboard Posts (A, B) and Footboard Posts (C, D). Secure by turning in a clockwise direction. See illustration #2.
10. Place the Finials (H) on top of the exposed thread of Spindles (G). Secure by turning in a clockwise direction. See illustration #2.

1885619 O-Sullivan King 4 Poster Bed
1885622 O-Sullivan Queen 4 Poster Bed

